

Front right adapter Ducato

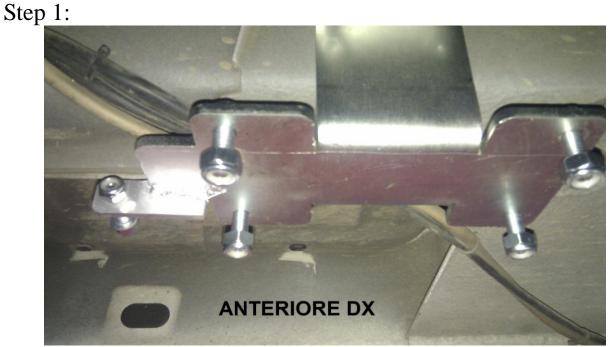

Put the adapter on the frame approximately under the cab seats, most rear possible, if necessary remove any sealing material for a perferct adherence, use a bottle jack to stop the bracket in the correct position and make the 8mm side hole then fix with the bolt.

Step 2:

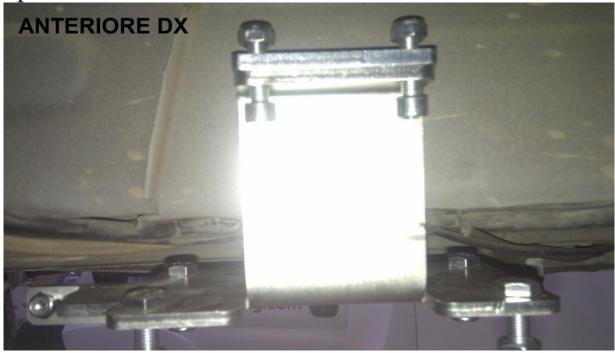

Apply the clamp

JACK WITH MOTOR TO THE OUTSIDE OF THE VEHICLE AND ROTATION FRONT

Front left adapter Ducato Step 1 - 2: Use the same procedure of the right adapter




Step 3:

In rare cases it may be necessary to grind, for a correct position of the adapter

JACK WITH MOTOR TO THE OUTSIDE OF THE VEHICLE AND ROTATION FRONT

Rear adapter Ducato



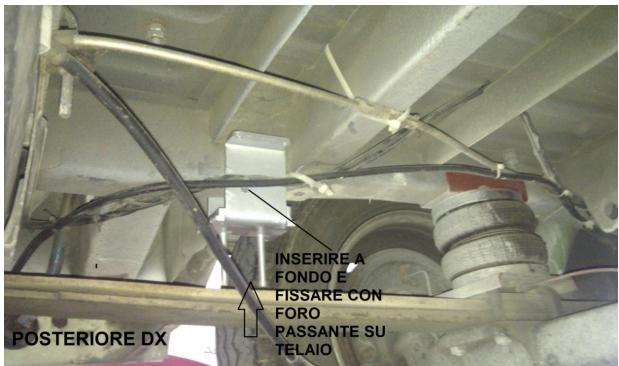

The rear adapter must be placed before the rear axle



Make the 10mm hole then fix with the bolt.

Rear adapter Ducato 244



BOTH REAR JACKS WITH ENGINE TO THE REAR OF THE VEHICLE AND INSIDE ROTATION